



# Vibro level indicator

Level limit switches for bulk goods

**VF1.** 

# Appliance information Gast Dust Ex



Index	Page
Application   Function   Construction   Technical data   Characteristics	02
Versions / Dimensions	03
Electrical data C5i   Electrical connection C5i	04
High alarm sensor   Low alarm sensor	04
Possibilities for installation   Protection against heavy load	05
Maximum load for vibration rod   Protection against bulk solids crashing down	05
Supply and evaluation device VF-VEC8-B22	06

**M©LLET** accurate point level

**ATEX** option



II 1/2G Ex ia IIB T4 Ga/Gb
II 1/2D Ex ia IIIC TX Da/Db



Ta

# Application (intended use)

The MOLOSvibro of the VF1. series is intended for the use as

level limit switch


in silos and vessels.

For all bulk solids with a minimum density of

0.01 t/m<sup>3</sup>.

For application in all industry sectors.

# Construction

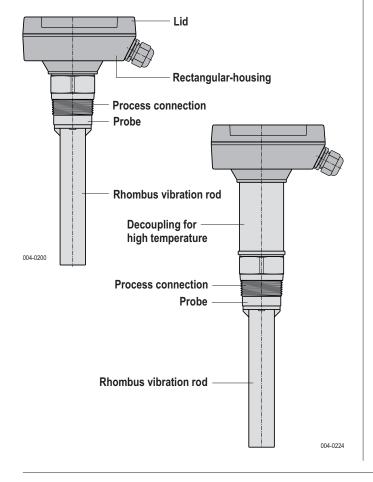

# **Function**

- Oscillation of the Rhombus vibration rod with a resonance frequency of approx. 285 Hz is stimulated by the electronic.
- As soon as the vibration rod has been covered by bulk solids, the oscillation will be damped.
- The electronic detects the damping and switches the relay signal.
- If the filling level sinks below the vibration rod, the rod starts vibrating with its resonance frequency again and the relay switches back.

# **Technical data**

Material Rectangular-housing
Process connection and probe
Rhombus vibration rod
Suspension cable sheath

Aluminium, RAL7001
Stainless steel 1.4301 / 304
Stainless steel 1.4301 / 304
Polyurethane

Process connection R3 R1½ EN 10226 or N3 1½" NPT

Ambient temperature -40 °C ... +70 °C

with separate housing -40 °C ... +80 °C

Process temperature VF12, VF13  $-40~^{\circ}$ C ...  $+80~^{\circ}$ C VF15  $-40~^{\circ}$ C ...  $+70~^{\circ}$ C  $\uparrow$ (Process)

VF12, VF13 high temperature E1 -40 °C ... +150 °C

Process pressure

Process pressure -0.95 bar ... 10 bar p(Process
Minimum density of bulk solids 0.01 kg/l (t/m³)

Response delay for damping 1 second

for start oscillation 2 to 5 seconds

Cable entry Gland 2xM20x1,5

Type of protection IP66/IP67 acc. DIN EN 60529 IP65 acc. DIN EN 60529

in separate rectangular-nousing 1705 acc. DIN EN 00529

Maintenance none

Maximum load for the end 1000 N vertical (V)

of the vibration rod 250 N horizontal (H)

Maximum tensile force at

suspension cable of type VF15 2000 N
Installation position VF12, VF13 any

osition VF12, VF13 any VF15 vertical

#### **Characteristics**


- Very robust vibration rod in Rhombus shape
- High sensitivity for bulk solids with a minimum density of 10 g/l
- Interface measurement possible
- Patented, braced membrane
- No digging free within the bulk solids due to small vibration amplitude
- Adjustable sensitivity in three setting adjustments: A for light, B for normal and C for sticking bulk solids
- High level and low level alarm selectable






# **Versions/Dimensions**


# VF12 Compact sensor

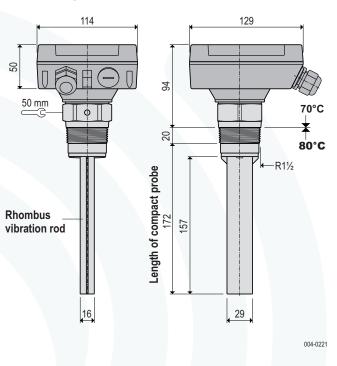


# VF13 Rod extension sensor

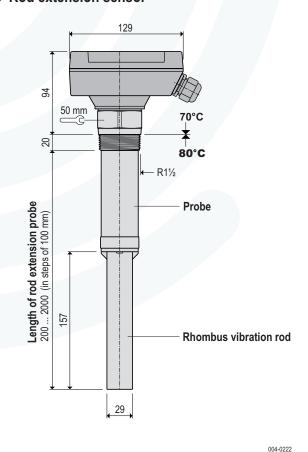

# VF15 Suspension cable sensor

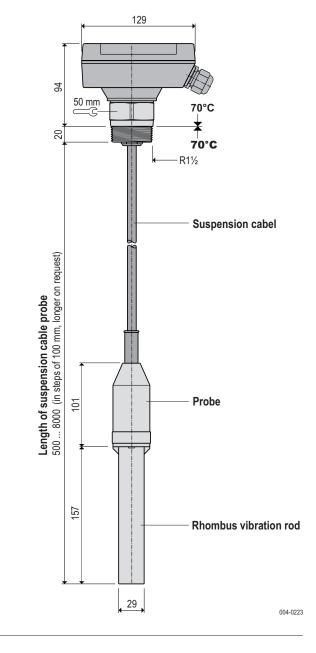

# E1 ... E3 High temperature

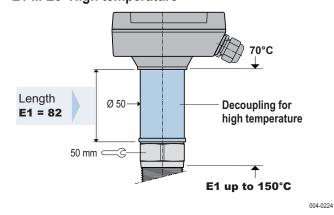



# Two wire electronic C5i

#### **Electrical data**

Supply voltage Ui 23.7 V DC from VF-VEC8-B22

 
l<sub>i</sub> 167 mA

**P**<sub>i</sub> 985 mW

L<sub>i</sub> negligible

C<sub>i</sub> negligible

#### **Electrical connection**



Supply only with supply and evaluation device VF-VEC8-B22 for GasEx.

**Current consumption** 

High alarm FH Vibration rod oscillates freely 8 mA Vibration rod covered 16 mA


Low alarm FL Vibration rod covered 8 mA

Vibration rod oscillates freely 16 mA


# High alarm sensor FH (factory setting)

**MOLOSvibro** level indicator of the **VF1**. series are configurated for **high level alarm** in the factory setting. The function can be changed with a jumper on the electronic board. The switching status is indicated by a LED on the electronic board, like it is explained below.

#### Free status - vibration rod oscillates freely

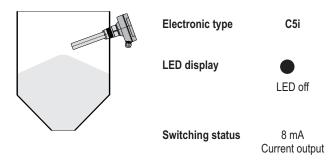


#### High alarm - vibration rod covered with bulk solids

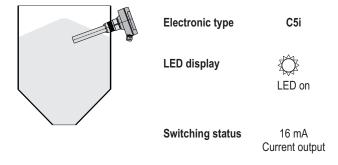


# Low alarm sensor FL (jumper repositioned)

**MOLOSvibro** level indicator of the **VF1**. series can be used for **low level alarm** with a changed factory setting. The function can be changed with a jumper on the electronic board. The switching status is indicated by a LED on the electronic board, like it is explained below.

#### Covered status - vibration rod covered with bulk solids

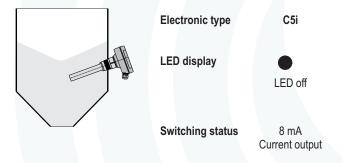


#### Low alarm - vibration rod oscillates freely

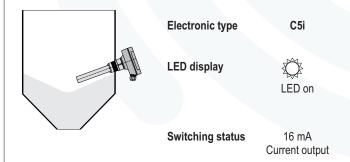




# **Possibilities for installation**

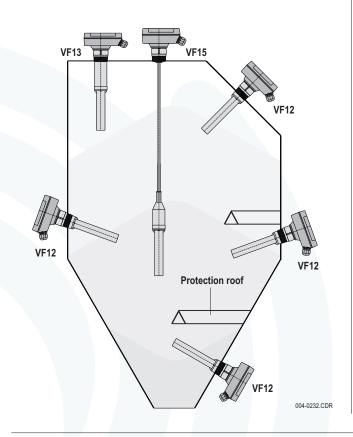


# **Protection against heavy load**

If needed, a protection roof or a stable deflector has to be installed inside the container, in order to protect the probe and the rod against impinging bulk solids.

Between protection roof and the probe has to be enough space that bulk solids could penetrate but not jam.

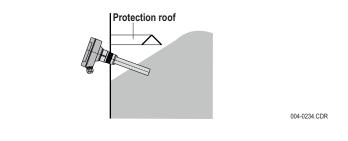



# **Maximum load for vibration rod**

 

# Protection against bulk solids crashing down upon the rod

Level indicators must not be affected by flying bulk goods particles e.g. from injection pies, filling pipes or down pipes. Therefore the bulk solids stream should be directed or redirected accordingly, or the level indicator should be placed so that bulk solids cannot impact directly onto the probe and vibration rod

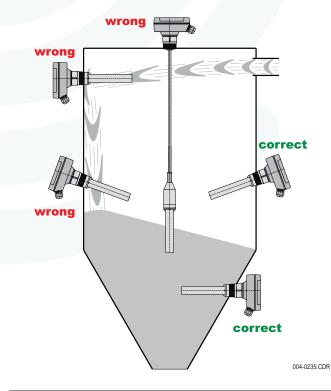

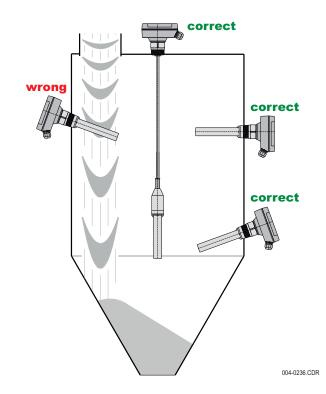


supply

# Application (intended use)

The supply and evaluation device type VF-VEC8-B22 is intended for the use as power supply for MOLOSvibro level indicators that are used in potentially explosive gas atmospheres.

It detects and evaluates the damping of the vibration rod, switches the signal relay and diagnoses a short circuit or broken cable at the connection to the probe and switches the failure relay.

#### **Dimensions**

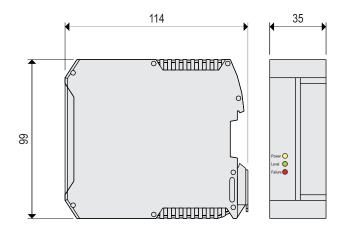

004-0240.CDR

# **Technical data**

Material Housing Polyamid, light gray

-20 °C ... +60 °C Ambient temperature Ta

20 ... 250 V AC/DC Supply voltage

Power consumption ≤ 3 VA

Connetion to sensor

≤ 23.7 V DC Supply voltage

Connection cable light grey 2-wire, maximum 35 Ω per wire Switching threshold 13 mA

change-over contact (SPDT) Signal relay (potential free) Error relay (potential free) change-over contact

Capacity of contact AC 6 A / 250 V

 $\leq$  6 A at 24 V / 0,5 A at 48 V DC minimum 24 V / 100 mA

DC

Ex i

**Connection clamps** maximum 2.5 mm<sup>2</sup>

IP Type of protection IP20 acc. DIN EN 60529

Ignition protection type 

( II (1) D [Ex ia Da] IIIC

LED display Power yellow Power supply available Filling level (high / low) Level green

Failure red Error (short circuit / broken cable)

Maintenance none

Installation Top hat rail assembly (35 mm)

Installation position any

 
# High and low alarm sensor

The signal relay of the supply and evaluation device VF-VEC8-B22 has a separate switching logic, that is demonstrated below. The function can be changed with a jumper on the two wire electronic board C5i installed in the MOLOSvibro sensor housing.

#### High alarm sensor FH (factory setting)


#### Free status

Vibration rod oscillates freely



#### High alarm

 Vibration rod covered with bulk solids




#### Low alarm sensor FL (jumper repositioned)

#### **Covered status**


06

 Vibration rod covered with bulk solids



#### Low alarm

 Vibration rod oscillates freely



# **Electrical connection**



Signal relay for high and low alarm



#### Error relay for short circuit and broken cable

= Relay energized Connection C-NO = Relay de-energized Connection C-NC Failure



Supply voltage

Wide range electronic C8



Connection to sensor MOLOSvibro Typ C5i

Two wire electronic **Ex i** (intrinsically safe)

Blue clamps

Subject to modification