



Swivelling lever with limit switch



Operating instructions

	Safety instructions Operating instructions		Page
			02
	 Specification Intended use Function Technical Data Materials Dimensions 	C	03
	2.1 Preparation2.2 Mechanical connections		03
			04 04
	4. Maintenance and servicing4.1 Maintenance4.2 Servicing	, C	04
	•		04 04



Swivelling lever with integrated limit switch



Read and follow these safety instructions first and take notice of the operating instructions.



1. Safety instructions Gas and Dust (Ex

For the application of limit switches in explosive hazardous areas

- The installation, initial operation and maintenance may be done by a qualified expert with electrical know-how only 1.1 and has to be supervised resp. controlled by an "authorized person" for explosion protection.
- Comply with the local and statutory rules and regulations and/or the VDE 0100. 1.2
- To keep the intrinsically reliability a certified barrier or a certified isolation amplifier with an intrinsically safe circuit 1.3 according to the present category and after the specify of the switch manufacturer has to be connected in series for power limitation.
- The swivelling lever has to be constantly conductible connected to the electrically conductive, earthed tubing.
 - If the tubing is not electrically conductive the swivelling lever has to be earthed.
- The pipeline must not be made of aluminum, titanium or zirconium.
- Take notice of the requirements of DIN EN 60079-14, DIN EN 60079-17 and DIN EN 1127-1, especially regarding the dust 1.6 deposits and temperatures and follow the pertinent rules and regulations.
- 1.7 The swivelling lever with limit switches can be used in areas classified as zone 1 and zone 21 or lower.



1.8	Temperatures	SNS
	Ambient temperature	-20 °C +60 °C
	Temperature class / maximun surface temperature	T6 / T 135 °C

02



Operating instruction

1. Specification

1.1 Intended use

The swivelling lever with limit switch is for signalizing that a hose coupling has been coupled at silos or tanks or coupling stations.

1.2 Function

While coupling the counter coupling or hose coupling the lever is swivelling beside and the limit switch will be actuate.

1.3 Technical data

Manufacturer	MOLLET Füllstandtechnik GmbH
Address	Industriepark RIO 103 74706 Osterburken
Name	Swivelling lever with limit switch
Туре	SNS B6
Weight	3 kg
Nominal size 06	5 for tube ∅ 76.1
08	0 for tube ∅ 88.9
10	0 for tube ∅ 108 114.3
12	5 for tube ∅ 133 139.7
15	0 for tube ∅ 159 168.3
Cabel length	2 2 meter cabel
	5 5 meter cabel
(0 10 meter cabel


Fixing plate Steel, galvanized

Steel, galvanized

Swivelling lever

1.5 Dimensions

1.4 Materials

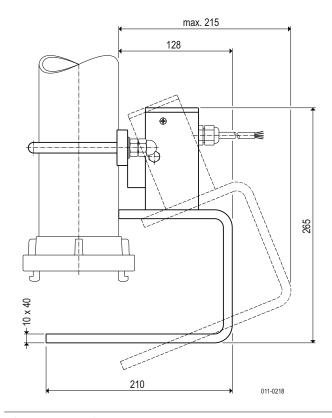


2. Installation

2.1 Preparation


Read and follow the safety instructions and the operating instructions, before handling with the device!

2.2 Mechanical conections

- Place the pipe shackle over the tube and into the borings of the fixing plate.
- Set the nuts and washers at the pipe shackle.
- Screw them tightly on.
- Align the swivelling lever as shown in the drawing below with a distance of about 10 up to maximum 25 mm to the coupling.

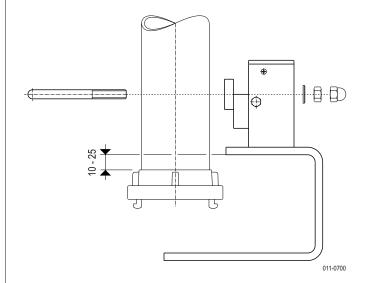

- Check whether the lever can be swivelled out without obstruction.
- In case of slanting or horizontal pipe always fasten to the upper side. The lever must fall into the final position shown in the drawing by virtue of its own weight.

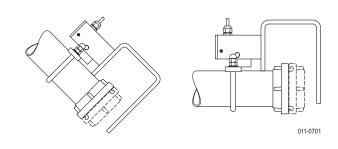

- Screw the both nuts so that the two threaded ends are about the same length.
- Now put the cap nuts on and screw them tightly.



Swivelling lever

with integrated limit switch



2.3 **Electrical connection**

SNS - Inductive proximity switch NAMUR

Switch PBTP (Polybutylenterephthalat) Material

Supply voltage 8 V DC


Normally Open (NO) **Switching function** -20 °C ... +60 °C Ambient temperature

Type of protection Ex type of protection


IP68/IP66 acc. DIN EN 60529 **B6**


😥 II 2D Ex ia IIIB T135 °C Db

Connection diagram

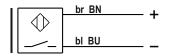

Lay a loop at the swivelling lever to compensate the swivelling movement

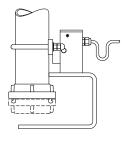

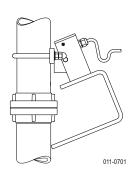

3. Utilization

3.1 Commissioning

Put the swivelling lever into operation only, if the installation and the electrical connection have been done correctly.

3.2 Normal operation

- Use the swivelling lever in its intended application only.
- Comply with the specifications on the data plate.

3.3 Inexpert handling

- Ignoring the safety instructions and the operating instructions.
- Not intended use.
- Mounting of spare parts which are no original parts.
- Violation against applicable law and standards.

4. Maintenance and Servicing

4.1 Maintenance

Inspect the swivelling lever about cleanness and smooth engagement in regular intervals. Define the intervals of the control depending on the ambient conditions and the frequency of use.

4.2 Servicing

- Carry out repairs only when the swivelling lever is disconnected from the electrical supply before.
- Damaged parts have immediately replaced with similar.
- Until the complete restoration of the proper function the swivelling lever must not be used any more.
- Use original spare parts only.

5. Storage

- Store the swivelling lever dry and dust-free.

6. Disposal

- The swivelling lever can be recycled.
- The disposal applies to the valid environmental guidelines according to the location of the carrier and the local manufacturing conditions.